

Programming Procedure for TIME Speaker Presets

These instructions supercede the instructions in the owner's manual.

These instructions also assume the TIME speakers are hooked up and operational.

TIME speakers must be programmed individually, one speaker at a time.

1. Tap the "Zone" button on the remote to select what zone the speaker is in
2. Select the speaker to be adjusted by using the "Speaker Select + or -" buttons on the remote. The blue light on the speaker will light when the speaker is selected.
3. Press the "Control" button on the remote and the blue light will start to blink.
4. Position the speaker using the angle buttons (0, 15, 30 or 45) for drop and rotate it by turning the positioning wheel on the remote until the speaker is in the position you would like to store. Blue light still blinking
5. Tap the "Store" button on the remote. Blue light still blinking.
6. Tap the "Preset 1, 2 or 3" button you want to assign this position to. Blue light still blinking.
7. Repeat steps 3-6 until all 3 presets for that speaker are completed. Blue light still blinking.
8. Press "Control" button on the remote and the blue light goes off.
9. Repeat steps 2-8 for the remaining speakers.

For speakers in other zones connected to this controller repeat steps 1-9.

If you have any questions regarding this procedure please feel free to call SpeakerCraft Tech Support at 1-800-448-0976